


Door Locks

n Locking the vehicle from inside

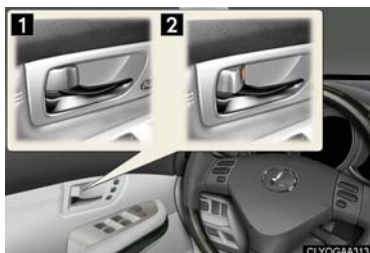

► Inside lock button

- 1 Locks
- 2 Unlocks




► Door lock switch

Operates all door locks.

- 1 Locks
- 2 Unlocks

n Locking the vehicle from outside

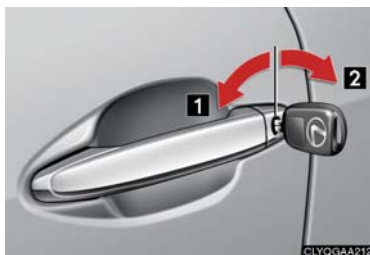

► Using the key

- 1 **Turn:** locks all doors
Turn and hold: closes the windows*
- 2 **Turn once:** unlocks the driver's door
Turn twice: unlocks all doors
Turn and hold: opens the windows*

*: On vehicles with a standard moon roof, the moon roof will also open/close.

► Using the wireless remote control (→P.8)

n Rear door child-protector lock




Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

Moon Roof

n Standard type

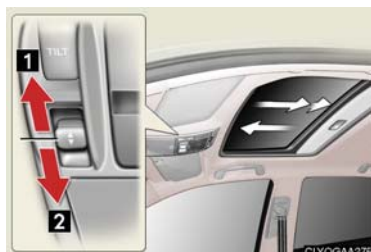


► Opening and closing

1 Opens

The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

2 Closes

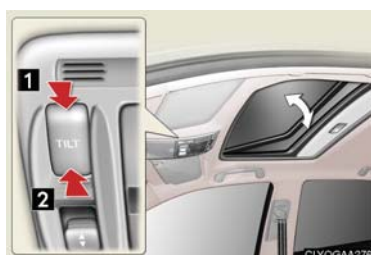


► Tilting up and down

1 Tilts up

2 Tilts down


n Multi-panel type

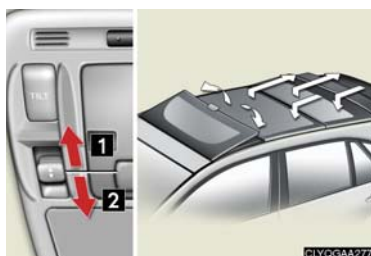

► Opening and closing

1 Press: opens

2 Press: closes the center and rear panels
Press and hold: closes the front panel

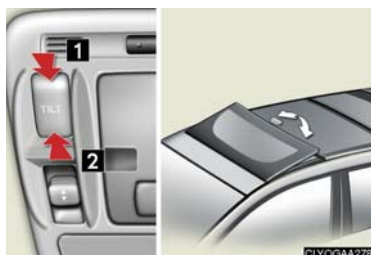

► Tilting up and down

1 Press: tilts up

2 Press and hold: tilts down

Back Door

n Back door opener



To open the back door, push up the opener and raise the door.

n Power back door switches (with power back door)



► Instrument panel

To open or close the back door, pull down the cover and press the switch for one second.




► Back door

To close the back door, press the switch.

n Wireless remote control (with power back door)

→P.8

n Turning the power back door system on and off (with power back door)

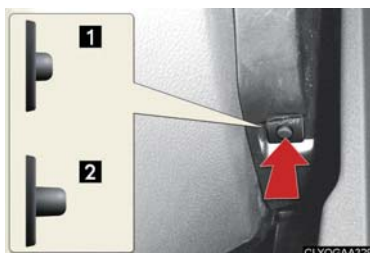


To disable the system, turn off the main switch in the glove box.

1 ON

2 OFF

When the power back door system is disabled, the back door cannot be opened using the wireless remote control or power back door switch.

Fuel Tank Cap

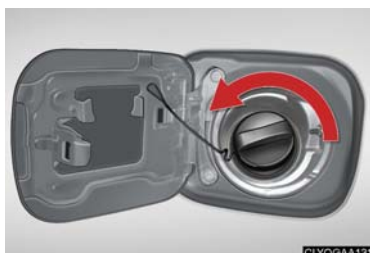

1 Press the fuel filler door opener.

2 Slowly remove the cap by turning it counter-clockwise.

After the cap is removed, it can be hung on the inside of the fuel filler door.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus



Hood



CLYOGAA100

1 Pull the hood release lever.



CLYOGAA213

2 Insert your fingers under the hood, pull the hood catch and lift the hood.

Power Windows



1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus